




Atech Flash Technology

EX-3U Service Guide



Warning: Please make sure to shut down your computer system before servicing the EX-3U reader

For more information or technical advise:
Call us toll free at 1-800-964-3088 (USA only)
email: support@atechflash.com
website: www.atechflash.com

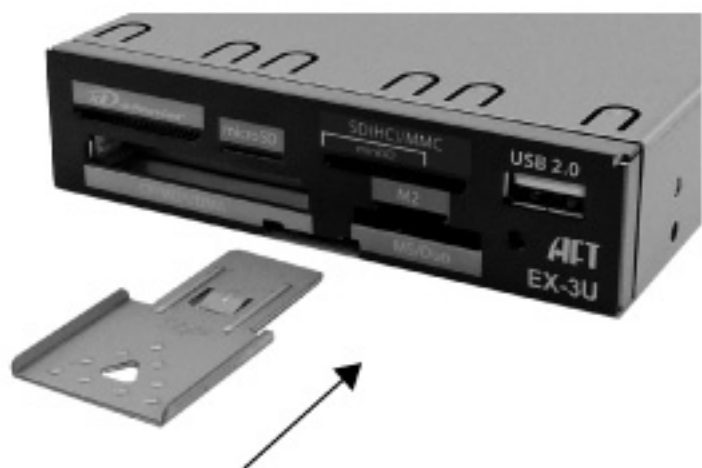


1. Locate SERVICE KEY, make sure that the word TOP is facing upwards.



2. Insert SERVICE KEY into key slot located under the CF and MS card slot.

Make sure the SERVICE KEY is parallel/even with the slot opening.

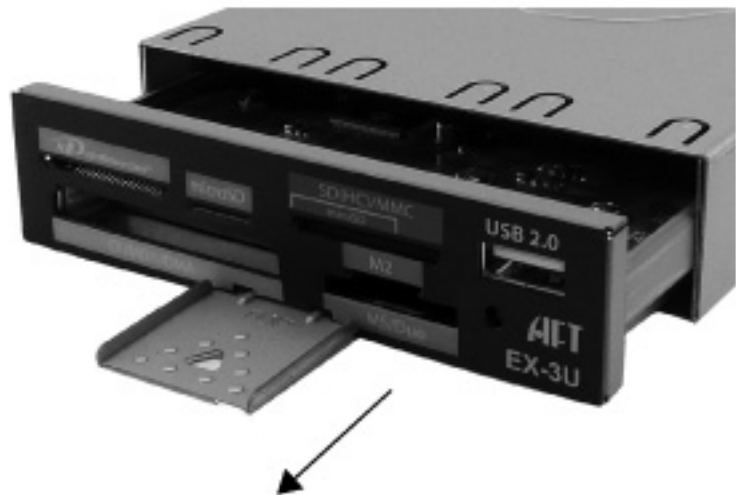

3. Push SERVICE KEY into slot until you feel it has locked onto the Bezel/PCB.

Pull on the SERVICE KEY to remove the Bezel/PCB from housing.



4. After removing the OLD Bezel/PCB, take NEW Bezel/PCB and insert into housing of EX-3U.



5. Once NEW Bezel/PCB is installed into EX-3U Chassis, you can power up your system and test the NEW Bezel/PCB.